



Mac 500 floors behind back drop

343  
②①

359  
②②

375  
②③

391  
②④

407  
②⑤

423  
②⑥

439  
②⑦

Mac 250 wash in front of back drop

①  
01

②  
14

③  
27

④  
40

⑤  
53

⑥  
66

②⑨  
452

③⑩  
465

Mac 2K on upstage truss

⑪  
175

⑫  
199

⑬  
223

⑭  
247

⑮  
271

⑯  
295

⑰  
319

Mac 2ks on down stage

⑦  
79

⑧  
103

⑨  
127

⑩  
151

## ISAAK PLOT PARTICULARS

WE WILL NEED A GOODS TRUSS UPSTAGE OF THE UPSTAGE PAR TRUSS FOR A 100LB BACKDROP OR YOU CAN OUT RIG A BACKDROP PIPE OFF THE UPSTAGE BUT I WOULD SUGGEST ADDING A CENTER MOTOR IF YOUR ONLY USING 2.

PLEASE DOUBLE WRAP THE UP STAGE SIDE OF THE DOWN STAGE TRUSS TO COUNTER BALANCE THE WEIGHT OF 4 MAC 2K MOVING LIGHTS THAT WILL HANG WITH SNAP BRACING OUT RIG PIPES.

WE WILL NEED YOU TO SUPPLY 2 HAZERS WITH FANS, WE PREFER DF 50S.

IN SOME CASES WE WILL NEED YOU TO SUPPLY THE MOVING LIGHTS AND AN AVO PEARL BOARD. WE WILL NOTIFY YOU IN ADVANCE IF THIS IS NECESSARY.

PLEASE MAKE ME A PATCH LIST FOR CONVENTIONALS TO PATCH INTO MY BOARD.


I WILL NEED YOU TO SUPPLY A FRONT OF HOUSE SNAKE WITH AT LEAST 3 DMX RUNS, ONE FOR CONVENTIONALS AND TWO FOR MOVERS, PLUS AC POWER.

THE DOWN STAGE TRUSS SHOWS 60 LAMPS, WE ONLY NEED 30 IF IT MAKES IT EASIER FOR YOU.

ALSO THE PLOT SHOWS NARROW LAMPS BUT IT DOSEN'T MATTER IF WE USE MED LAMPS AS LONG AS THEY ARE ALL THE SAME IN THAT TRUSS.

EVEN THOUGH YOU MAY ONLY SUPPLY CONVENTIONAL LIGHTS I WILL STILL NEED AS MUCH HELP AS I CAN GET SETTING UP THE MOVING LIGHT PACKAGE.

THANKS VERY MUCH!!!! LANE 323 496 6555

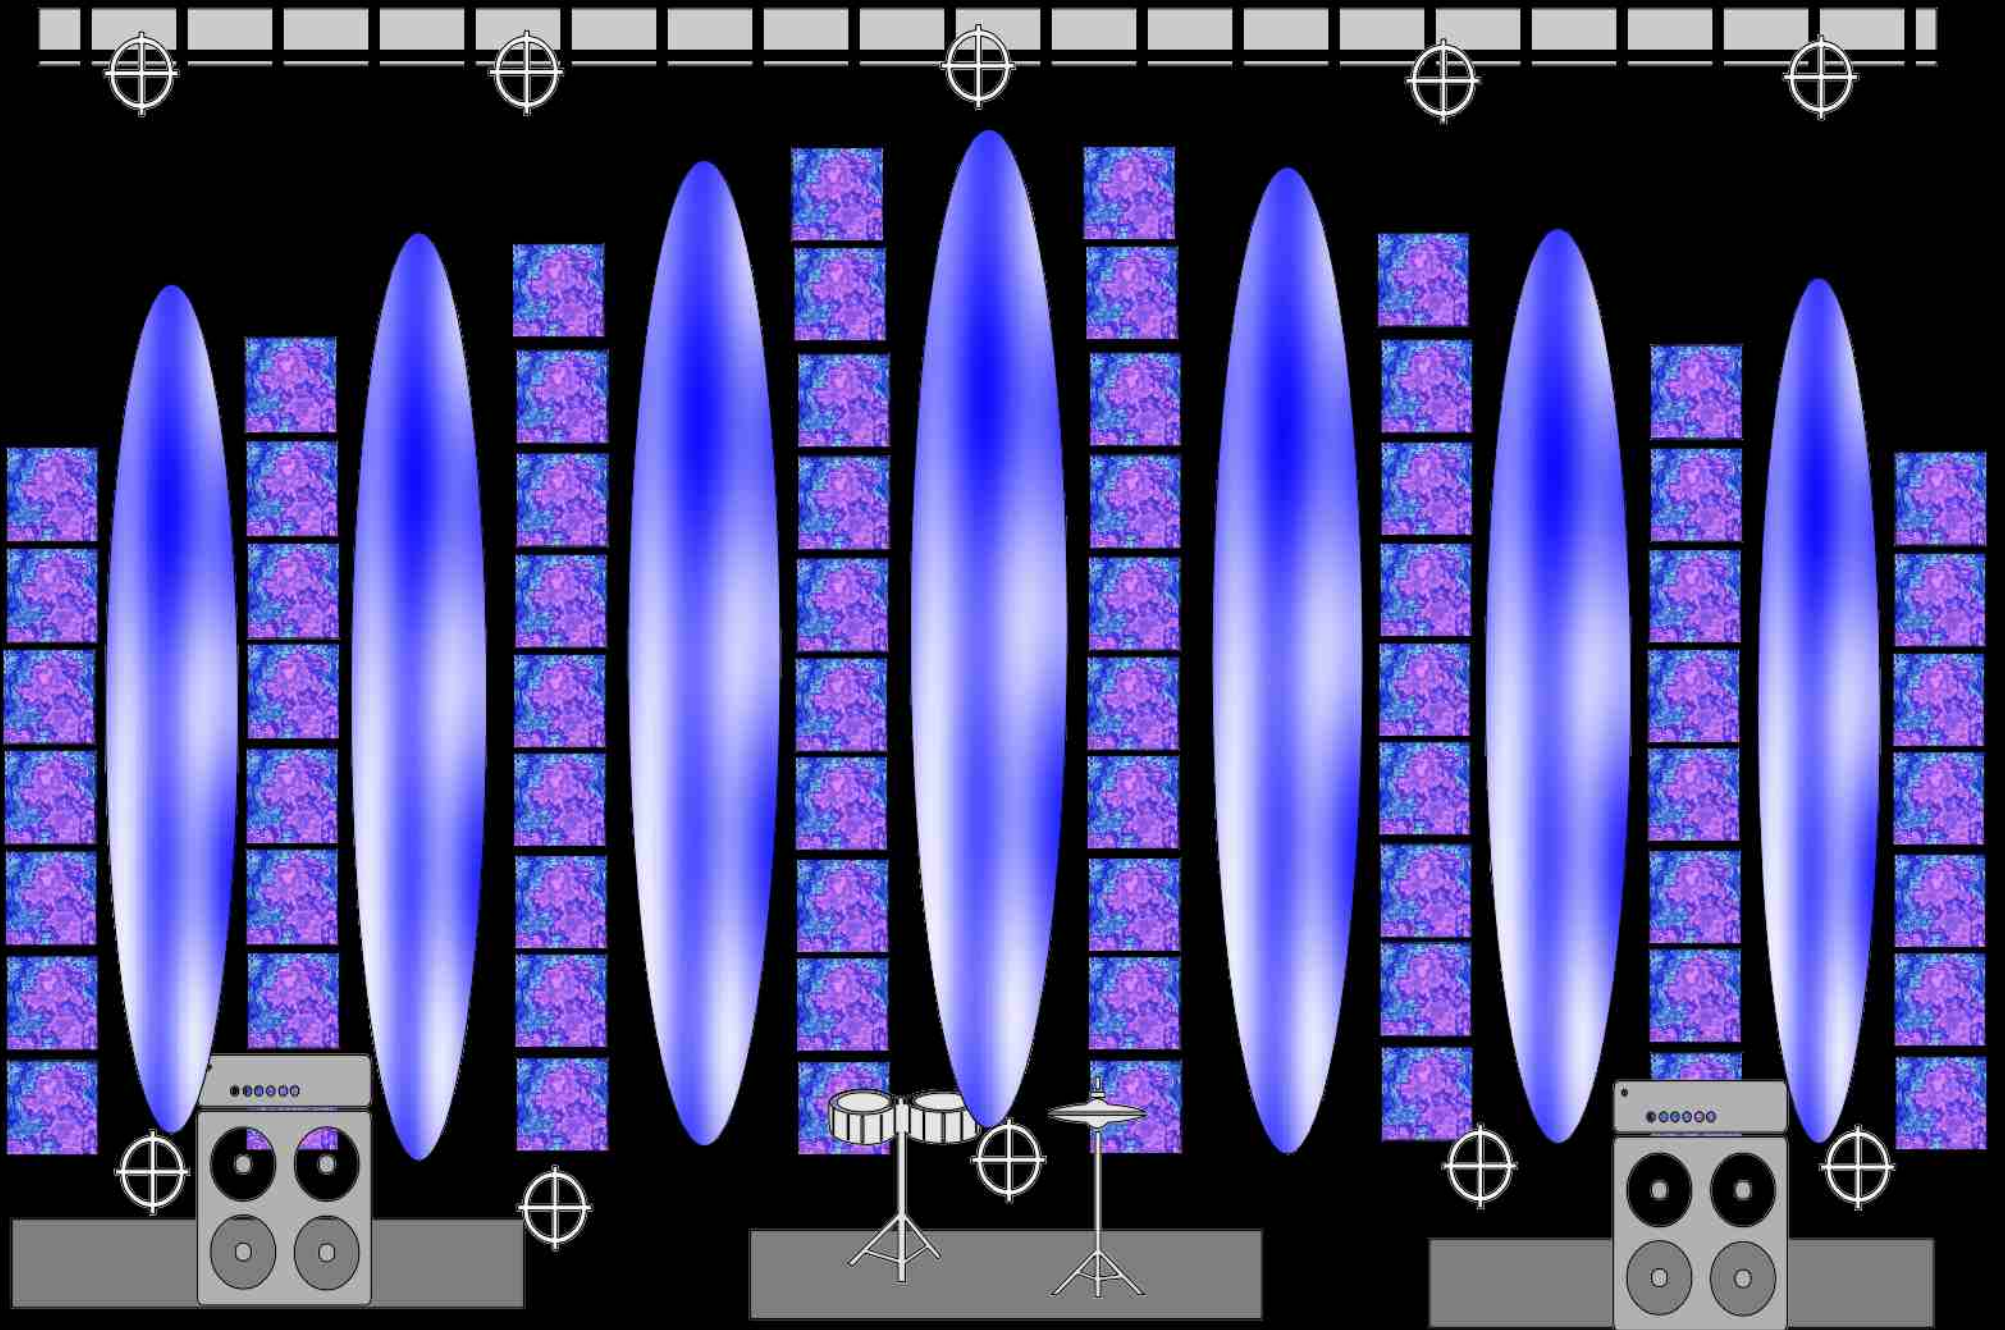

# CONVENTIONAL PATCH SHEET

CHANNEL	LAMP COLOR	DIMMER #
1	D/S PAR	119
2	D/S PAR	106
3	D/SPAR	22
4	D/S PAR	126
5	D/S PAR	180
6	D/S PAR	116
7	U/S PAR	119
8	U/S PAR	180
9	U/S PAR	116
10	U/S PAR	106
11	U/S PAR	179
12	U/S PAR	N/C
13	S/R SPEC	N/C
14	SPEC	
15	SPEC	
16	SPEC	
17	SPEC	
18	SPEC	
19	SPEC	
20	S/L SPEC	
21	S/R AUD	N/C
22	AUD	
23	AUD	
24	AUD	
25	AUD	
26	AUD	
27	AUD	
28	S/L AUD	
29	U/S ACL	N/C
30	U/S ACL	